# **DSEEXTRA® BATTERY CHARGERS AND EXPANSION NODULES.**

DSE157 OUTPUT RELAY EXPANSION MODULE

The DSE157 is an output relay expansion module for use with DSEControl® and DSEPower® Series Modules (excluding DSE51xx).

The DSE157 has been designed to extend a host modules output capabilities. The additional capabilities allow OEM's to meet increasingly complex industry specifications.

The module incorporates 'DIN' rail mountings and an interconnecting FCC 68 cable, allowing quick fixing into a panel. The module will work up to 50 meters from the host control module.

# FEATURES

- 8 configurable relay contacts Plug and socket host connection
- for quick and easy set-up • Two DSE157 modules can be linked together to provide 16 additional outputs (DSE53xx and DSE55xx modules only).

## **CONFIGURATION**

The DSE157 is configured via the host control module and PC software.

Relay contacts can be configured to be either:

de-energised - open on commandenergised - close on command

When using two DSE157's together, each module needs to be identified as either 'A' or 'B'. This can be done via the small selector switch on the circuit board.



R

# SPECIFICATION

#### DC SUPPLY

The DSE157 is powered from the plant battery or from a low voltage supply between 8V and 35V continuous. It is able to survive 0V for 50ms during cranking, providing supply was at least 10V before dropout and supply recovers to 5V. This is achieved without the need for internal batteries.

#### MAXIMUM OPERATING CURRENT 120mA @ 12V, 70mA @ 24V

MAXIMUM STANDBY CURRENT 25mA @ 12V, 18mA @ 24V

AUXILIARY RELAY CONTACTS 5Amp DC rated voltage free

#### DIMENSIONS

DIN Rail mounted housing 72mm x 160mm x 77mm 2.8" x 6.3" x 3"

#### SELECTOR SWITCHES

Test - Operates all relays to test operation Unused - No function Enable Lamp Test - Relays will energise on receipt of a lamp test signal from host module A/B Select - Determines whether the 157 responds to signals for expansion A or B relays

## INDICATIONS

Lit LED - Power On Flashing LED - Link lost (to controller) 8 Relay active LED's

# ENVIRONMENTAL TESTING STANDARDS

#### ELECTRO MAGNETIC CAPABILITY (EMC)

BS EN 61000-6-4 EMC Generic Emission Standard for the Industrial Environment BS EN 61000-6-2 EMC Generic Immunity Standard for the Industrial Environment

#### ELECTRICAL SAFETY

BS EN 60950 Safety of Information Technology Equipment including Electrical Business Equipment

**TEMPERATURE** BS EN 60068-2-2 Test Ab to 70°C Test Ab to -30°C

VIBRATION BS EN 60068-2-6 Ten sweeps in each of the three major axes 5Hz to 8Hz @ +/- 7.5mm

HUMIDITY BS EN 60068-2-30 Test Db 95% RH @ 55°C for 12 hours

## SHOCK

BS EN 60068-2-27 Three shocks in each of three major axes 15gn in 11mS

DEEP SEA ELECTRONICS PLC maintains a policy of continuous development and reserves the right to change the details shown on this data sheet without prior notice. The contents are intended for guidance only.

# DEEP SEA ELECTRONICS PLC

Highfield House Hunmanby Industrial Estate Hunmanby, North Yorkshire YO14 0PH England

Registered in England & Wales No.01319649

DEEP SEA ELECTRONICS PLC THAILAND

TPI Tower, Lobby 3 Floor 27, 26-56 Chan New Road Tungmahamek, Sathom Bangkok 10120, Thailand

DEEP SEA ELECTRONICS INC USA

3230 Williams Avenue Rockford IL 61101-2668 USA

# **DSE157**

**TELEPHONE** +44 (0)1723 890099

**FACSIMILE** +44 (0)1723 893303

VAT No.316923457

**TELEPHONE** +66 (0) 2678 3028

**FACSIMILE** +66 (0) 2670 6228

**TELEPHONE** +1 (815) 316 8706

**FACSIMILE** +1 (815) 316 8708 **EMAIL** sales@deepseaplc.com


WEBSITE www.deepseaplc.com

EMAIL sales@dseplc.com

**WEBSITE** www.deepseaplc.com

EMAIL sales@deepseausa.com

**WEBSITE** www.deepseausa.com

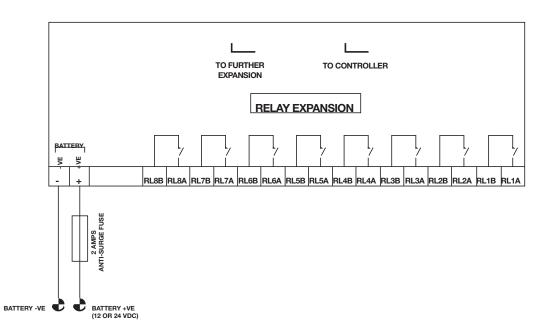

# RELATED MATERIALS

DSE5210 & 5220 data sheet DSE5210 manual DSE5220 manual DSE5310 & 5320 data sheet DSE5320 manual DSE5310 manual 52/53xx Software Manual 55xx Software Manual

# PART NO'S

055-037 053-023 057-016 055-038 057-014 057-013 057-006 057-007

# TITLE

DSE5510 data sheet DSE5510 manual DSE5520 data sheet DSE5520 manual DSE5560 data sheet DSE5560 manual PART NO'S

055-039 057-015 055-040 057-016 055-041 057-017





