



## ACCESSING THE FRONT PANEL CONFIGURATION EDITOR.

- Ensure the engine is at rest and the module is in STOP mode by pressing the Stop/Reset  button. Press the Stop/Reset  and Info  buttons simultaneously.

- If a module security PIN has been set, the PIN number request is then shown :



- Press the  button the first digit will flash to enable the pin to be entered.

- Press  (up) or  (down) to adjust it to the correct value.

- Press  (right) when the first digit is correctly entered. The digit you have just entered will now show '#' for security.

- Repeat this process for the other digits of the PIN number. You can press  (left) if you need to move back to adjust one of the previous digits.

- When  is pressed after editing the final PIN digit, the PIN is checked for validity. If the number is not correct, you must re-enter the PIN.

If the PIN has been successfully entered (or the module PIN has not been enabled), the editor is displayed :

## EDITING A PARAMETER

- Enter the editor as described above.

- Press the  or  to cycle to the parameter you wish to view/change.

- To edit the parameter, press  to enter edit mode. The parameter is highlighted in blue to indicate that you are editing the value.

- Press  or  down buttons to change the parameter to the required value.

- Press  to save the value. The parameter ceases flashing to indicate that it has been saved.

- To exit the editor at any time, press and hold the  or  button.

## DIMENSIONS AND MOUNTING

For flat surface mounting in a Type 1 enclosure to meet UL requirements

### DIMENSIONS

310.0mm x 161.5mm x 42mm (12.2" x 6.4" x 1.6")

### PANEL CUTOUT:

282mm x 136mm (11.1" x 5.4")

## ACCESSING THE 'RUNNING' CONFIGURATION EDITOR

- The 'running' editor can be entered while the engine is running. All protections remain active if the engine is running while the running editor is entered.
- Press and hold the  button to enter the running editor.

## ADJUSTABLE PARAMETERS (Running editor)

- Enter the editor as described above.

- Press the up  or down  buttons to cycle to the section you wish to view/change.

- To Edit the parameter press the  button to enter edit mode. The parameter begins to flash to indicate that you are editing the value.

- Press the up  or down  buttons to change the parameter to the required value.

- Press the  button to save the value. The parameter ceases flashing to indicate that it has been saved.

- To exit the editor at any time, press and hold the  button.



### Deep Sea Electronics Plc.

Tel: +44 (0)1723 890099  
Fax: +44 (0)1723 893303  
Email: [support@deepseapl.com](mailto:support@deepseapl.com)  
Web: [www.deepseapl.com](http://www.deepseapl.com)

### Deep Sea Electronics inc.

Phone: +1 (815) 316-8706  
Fax: +1 (815) 316-8708  
TOLL FREE (USA only) : Tel: 1 866 636  
9703  
Email: [dsesales@deepseausa.com](mailto:dsesales@deepseausa.com)  
Web: [www.deepseausa.com](http://www.deepseausa.com)